

Chapter 3. Principles and Practices of Irrigation Management for Vegetables¹

Lincoln Zotarelli, Michael D. Dukes, and Eric H. Simonne²

This section contains basic information on vegetable water use and irrigation management, along with some references on irrigation systems. Proper water management planning must consider all uses of water, from the source of irrigation water to plant water use. Therefore, it is very important to differentiate between crop water requirements and irrigation or production-system water requirements. Crop water requirements refer to the actual water needs for evapotranspiration (ET) and plant growth, and they primarily depend on crop development and climatic factors, which are closely related to climatic demands. Irrigation requirements are primarily determined by crop water requirements, but they also depend on the characteristics of the irrigation system, management practices, and the soil characteristics in the irrigated area.

Best Management Practices (BMP) for Irrigation

BMPs have historically been focused on nutrient management and fertilizer rates. However, because rainfall or irrigation water is the vector of off-site nutrient movement of nitrate in solution and phosphate in sediments as well as other soluble chemicals, proper irrigation management directly affects the efficacy of a BMP plan. The irrigation BMPs in the *Water Quality and Water Quantity Best Management Practices for Florida Vegetable and Agronomic Crop (VAC) Operations* manual (download at <https://ccmedia.fdacs.gov/content/download/77230/file/vegAgCropBMP-loRes.pdf>) cover all major aspects of irrigation, such as irrigation system design, system maintenance, erosion control, and irrigation scheduling.

Uses of Irrigation Water

Irrigation systems have several uses in addition to water delivery for crop ET. Water is required for a preseason operational test of the irrigation system to check for leaks and to ensure proper performance of the pump and power plant. Irrigation water is also required for field preparation, crop establishment, crop growth and development, within-season system maintenance, delivery of chemicals, frost protection, and other uses, such as dust control.

Field Preparation

Field preparation water is used to provide moisture to the field soil for tillage and bed formation. The water used for field preparation depends on specific field cultural practices, initial soil moisture conditions, the depth to the natural water table, and the type of irrigation system. Drip-irrigated fields on sandy soils often require an additional irrigation system for field preparation because drip tubes are not installed until after the beds have been formed. Thus, many drip-irrigated vegetable fields may also require an overhead or subirrigation system for field preparation. For example, many strawberry production fields have sprinkler irrigation systems already installed for frost protection. These systems are also used for field preparation and may apply one or more inches of water for this purpose. Subirrigated (seepage) fields use the same system for field preparation as for crop establishment, plant growth needs, and frost protection. Subirrigation water management requirements depend on the soil characteristics within the irrigated field and surrounding areas. Sufficient water must be provided to raise the water table level as high as 18–24 in. below the soil surface. Water is required to fill the pores of the soil and to satisfy evaporation and subsurface runoff requirements. As a rough guide, 1.0–2.5 in. of water are required for each foot of water table rise. For example, a

field with a preirrigation water table 30 in. deep may need about 2 in. of water to raise the water table to 18 in., while a preirrigation water table at 48 in. may require 5 in. of water for the same result.

Crop Establishment

Vegetables that are set as transplants, rather than direct seeded, require irrigation for crop establishment in excess of crop ET. Establishment irrigations are used either to keep plant foliage wet by overhead sprinkler irrigation (to avoid desiccation of leaves) or to maintain high soil moisture levels until the root systems increase in size and plants start to actively grow and develop. Establishment irrigation practices vary among crops and irrigation systems. Strawberry plants set as bare-root transplants may require 7 to 14 days of frequent intermittent overhead irrigation for establishment prior to irrigation with the drip system. Practices like intermittent irrigation, use of low-volume sprinklers, and use of crop protectants can reduce the volume of irrigation water required for establishment of strawberries. The amount of water required for crop establishment can range widely depending on crop, irrigation system, and climate demand. Adequate soil moisture is also needed for the uniform establishment of direct-seeded vegetable crops.

Crop Growth and Development

Irrigation requirements to meet the ET needs of a crop depend on the type of crop, field soil characteristics, irrigation system type and capacity, and crop growth stage. Crops vary in growth characteristics that result in different relative water-use rates. Soils differ in texture and hydraulic characteristics such as available water-holding capacity (AWHC) and capillary movement. Because sands generally have very low AWHC values (3% to 6% is common), a 1% change in AWHC affects irrigation practices.

Water Application (Irrigation Requirement)

Irrigation systems are generally rated with respect to application efficiency (Ea), which is the fraction of water that has been applied by the irrigation system and that is available to the plant for use (Table 1). Applied water that is not available to the plant may have been lost from the crop root zone through evaporation or wind drifts of spray droplets, leaks in the pipe system, surface runoff, subsurface runoff, or deep percolation

within the irrigated area. Irrigation requirements (IR) are determined by dividing the desired amount of water to provide to the plant (ETc) by the Ea as a decimal fraction (Eq. [1]). For example, if it is desired to apply 0.5 in. to the crop with a 75% efficient system, then $0.5/0.75 = 0.67$ in. would need to be pumped. Hence, when seasonal water needs are assessed, the amount of water needed should be based on the irrigation requirement and all the needs for water, not only on the crop water requirement. For more information, consult “Field Evaluation of Microirrigation Water Application Uniformity” (<https://ask.ifas.ufl.edu/ae094>). Catch cans can be used in the field to measure the actual amount of water applied.

Eq. [1] Irrigation requirement = Crop water requirement / Application efficiency

IR = ETc/Ea

Fertigation/Chemigation

Irrigation systems are often used for the delivery of chemicals such as fertilizers, soil fumigants, or insecticides. The crop may require nutrients when irrigation is not required (e.g., after heavy rainfall). Fertilizer injection schedules based on soil test results are provided in [chapter 2 of this production guide](#). Fertigation should not begin until the system is pressurized. It is recommended to always end a fertigation/chemigation event with a short flushing cycle with clear water and/or to rinse crop foliage to avoid the accumulation of fertilizer or chemical deposits in the irrigation system. The length of the flushing cycle should be 10 minutes longer than the travel time of the fertilizer from the irrigation point to the farthest point of the system.

System Maintenance

Irrigation systems require periodic maintenance throughout the growing season. These activities may require system operation during rainy periods to ensure that the system is ready when needed. In addition, drip irrigation systems may require periodic maintenance to prevent clogging and system failure. Typically, cleaning agents are injected weekly, but in some instances, more frequent injections are needed.

Frost Protection

For some crops, irrigation is used for frost protection during winter growing seasons. For strawberry

production, sprinkler irrigation is primarily used with application rates of about 0.25 in. per hour during freeze events. Water freezes at 32°F, while most plant tissues freeze at lower temperatures. Overhead freeze protection is effective for air temperatures as low as 26°F–28°F, but seldom below. For vegetable fields with subirrigation systems, the relatively higher temperature of groundwater can be used for cold protection. Growers may also irrigate to raise the water table throughout the field. Frost protection water requirements vary depending on the severity and duration of freeze events, the depth to the existing water table level, and field hydraulic characteristics. For more information, consult “Microsprinkler Irrigation for Cold Protection of Florida Citrus” (<https://ask.ifas.ufl.edu/ch182>) and “Citrus Cold Weather Protection and Irrigation Scheduling Tools Using Florida Automated Weather Network (FAWN) Data” (<https://ask.ifas.ufl.edu/ss509>).

Other Uses

Other irrigation uses vary according to the type of crop, system characteristics, and field location. Some examples include periodic overhead irrigation for dust control, wetting of dry row middles to settle dust and prevent sand from blowing during windy conditions, and wetting of roadways and drive aisles to provide traction for farm vehicles.

Irrigation Scheduling

Irrigation scheduling consists simply of applying water to crops at the *right* time and in the *right* amount, and it is considered an important BMP. The characteristics of the irrigation system, crop needs, soil properties, and atmospheric conditions must all be considered to properly schedule irrigations. Poor timing or insufficient water application can result in crop stress and reduced yields from inappropriate amounts of available water or nutrients. In sandy soils, excessive water applications may reduce yield and quality and increase the risk of nutrient leaching.

A wide range of irrigation scheduling methods is used in Florida, with corresponding levels of water management (Table 2). The recommended method (level 5) for scheduling irrigation (drip or overhead) for vegetable crops is to combine the crop water requirement method, which considers the plant growth stage associated with measurements of soil water status,

with guidelines for splitting irrigation (see below). A typical irrigation schedule contains (1) a target crop water requirement adjusted to growth stage and actual evaporative demand, (2) adjustment of irrigation application based on soil moisture, (3) a rule for splitting irrigation, (4) a method to account for rainfall, and (5) recordkeeping (Table 3). For seepage irrigation, the water table should be maintained near the 18 in. depth (measured from the top of the bed) at planting and near the 24 in. depth when plants are fully grown. Water tables should be maintained at the proper level to ensure optimum moisture in the bed without leading to oversaturation of the root zone and potential losses of nutrients. Water tables can be monitored with a section of PVC pipe sunk in the soil with a calibrated float inside the PVC pipe. The calibrated float can be used to determine the exact level of the water table.

Soil Water Status, Soil Water Tension, and Soil Volumetric Water Content

Generally, two types of sensors may be used to measure soil water status: those that measure soil water potential (also called tension or suction) and those that measure volumetric water content. Soil water tension (SWT) represents the magnitude of the suction (water potential, negative pressure) that the plant roots must create to free soil water from the attraction of the soil and move it into the root cells. The drier the soil, the higher the suction needed, and hence the higher SWT. SWT is commonly expressed in centibars (cbar) or kilopascals (kPa) (1 cbar = 1 kPa; 7 kPa = 1 psi). For most vegetable crops grown on the sandy soils of Florida, SWT in the rooting zone should be maintained between 6 (slightly above field capacity) and 15 cbar. Because of the low AWHC of Florida soils, most full-grown vegetable crops will need to be irrigated daily. During early growth, irrigation may be needed only two to three times weekly. SWT can be measured in the field with moisture sensors or tensiometers.

Within the category of volumetric sensors, capacitance-based sensors have become common in recent years due to a decrease in cost of electronic components and increased reliability of these types of sensors. However, sensors available on the market have substantially different accuracies, responses to salts, and costs. Soil moisture sensors and tensiometric instruments are detailed in the publication “Field Devices for Monitoring Soil Water Content” (<https://ask.ifas.ufl.edu/ae266>). All

methods under this definition estimate the volume of water in a sample volume of undisturbed soil (ft^3/ft^3 or percentage). This quantity is useful for determining how saturated the soil is (i.e., what fraction of total soil volume is filled with the soil aqueous solution). When expressed in terms of depth (volume of water in soil down to a given depth over a unit surface area [inches of water]), it can be compared with other hydrologic variables like precipitation, evaporation, transpiration, and deep drainage.

Practical Determination of Soil Field Capacity Using Volumetric Soil Moisture Sensors

It is very important that the irrigation manager understands the concept of “field capacity” to establish an irrigation strategy that provides optimum soil moisture for plant growth, productivity, and reduction of fertilizer nutrient leaching. Figure 1 represents volumetric soil water content (VWC) at a depth of 0–6 in. measured by a capacitance sensor over a period of four days. For the soil field capacity point determination, it is necessary to apply an irrigation depth (or observe a rainfall event) that saturated the soil layer, in this case, 0–6 in. The depth of irrigation applied in a single irrigation event was 4,645 gal/A (equivalent to 0.17 in. for overhead or seepage irrigation, or 34 gal/100 ft for drip irrigation with 6 ft bed centers in plasticulture). Right after the irrigation events, there was a noticeable increase in soil moisture content. The degree to which the VWC increases, however, is dependent upon the volume of irrigation, which is normally set by the duration of the irrigation event. For plastic-mulched drip irrigation in sandy soils, long irrigation events result in a relatively large increase in soil moisture in the area below the drip emitter. The spike in soil moisture appears to only be temporary because the irrigation water rapidly drains down beyond the 6 in. zone (observed by the decrease in VWC). This rapid spike in soil water content indicates that the VWC rapidly reaches a point above the soil water-holding capacity, and the water percolated down to deeper soil layers. For sandy soils, the change in the slope of drainage and extraction lines, in other words, changing from “rapid” to “slower” decrease in soil water content, can be assumed as the “field capacity point.” At this time, the water has moved out from the large soil pores (macropores), and air has taken its place. The remaining pore spaces (micropores) are still filled with

water and will supply the plants with needed moisture. Between the end of day 1 and day 3, the VWC declined at a constant rate as a result of drainage, but most of the water extraction was due to evapotranspiration during the day.

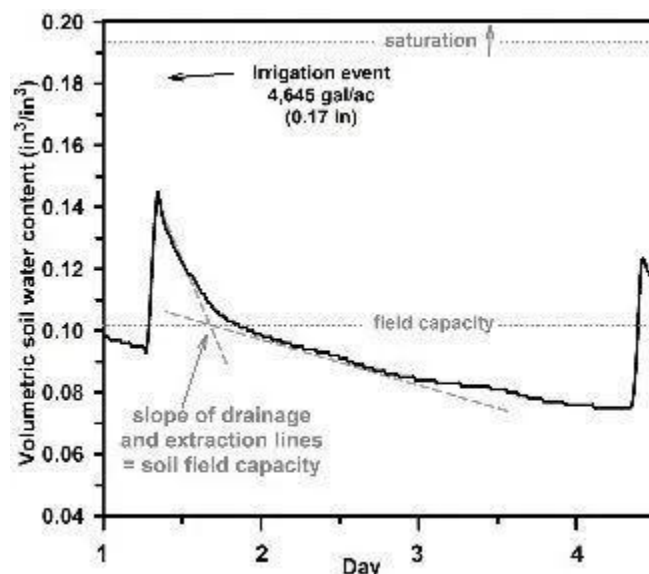


Figure 1. Example of practical determination of soil field capacity at 0–6 in. soil depth after an irrigation event using soil moisture sensors.

Examples of Irrigation Scheduling Using Volumetric Soil Moisture Sensor Devices

In this section, two examples of irrigation management of vegetable crops in sandy soils using soil moisture sensor readings are provided: one example with excessive (“over”) irrigation (Figure 2) and one with adequate irrigation (Figure 3) using plasticulture. In Figure 2, the irrigation events consisted of a single application of a daily irrigation event at 4,718 gal/A (equivalent to 0.18 in. for overhead or seepage irrigation, or 36 gal/100 ft for drip irrigation with 6 ft bed centers in plasticulture). After each irrigation event, there was an increase in the soil water content followed by rapid drainage. Large rainfall events may lead to substantial increases in soil moisture content. On day 2, right after the irrigation, a large rainfall of 0.44 in. occurred, which resulted in a second spike of soil water content in the same day. The following irrigation (day 3) started when the volumetric soil water content was above the soil field capacity. In this case, the irrigation event on day 3 could have been safely skipped. Between days 3 and 6, no irrigation was applied to the crop. The volumetric water content decreased from 0.14–0.08 in^3/in^3 . Due to the very low water-holding capacity of the sandy soils, skipping irrigation for several days could

lead to unneeded crop water stress, especially during very hot or very windy days (when high evapotranspiration rates may occur), or during flowering/fruit development stage. Between days 6 and 10, large daily irrigation events were repeated, exceeding the “safe irrigation zone” and leading to more water drainage and nutrient leaching.

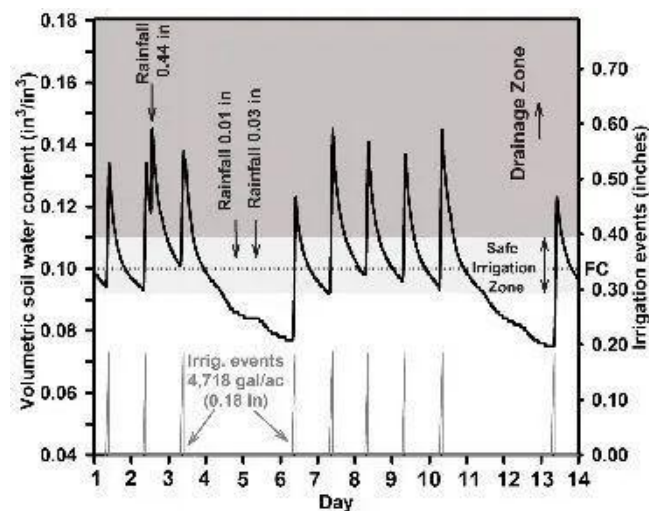


Figure 2. Example of excessive (“over”) irrigation of the upper soil layer (0–6 in. depth) moisture content for drip irrigation under plastic-mulched conditions for sandy soils. The black line indicates volumetric soil water content using soil moisture sensors. The gray line indicates irrigation events, each single daily irrigation event having a volume application of 65 gal/100 ft (0.18 in.). The dotted line indicates soil field capacity. Arrows indicate rainfall events.

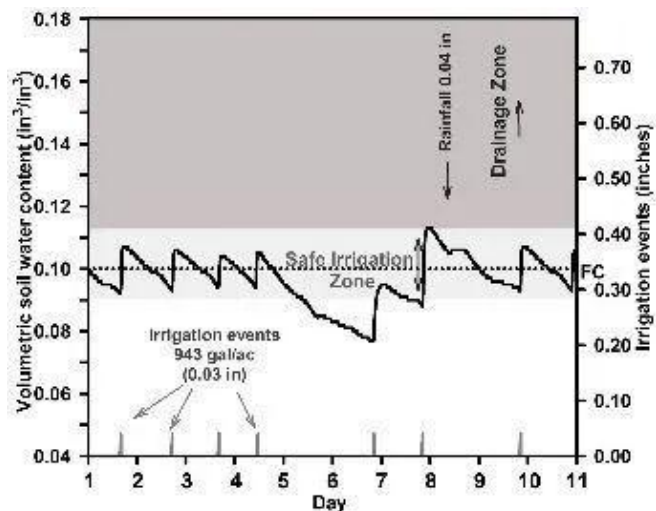


Figure 3. Example of adequate irrigation management using soil moisture sensors for monitoring the volumetric soil moisture content in the upper soil layer (0–6 in. depth) on drip irrigation under plastic-mulched conditions for sandy soils. The black line indicates volumetric soil water content using soil moisture sensors. The gray line indicates irrigation events, each single daily irrigation event having a volume application of 943 gal/A (0.03 in.). The dotted line indicates soil field capacity (FC). Arrows indicate rainfall events.

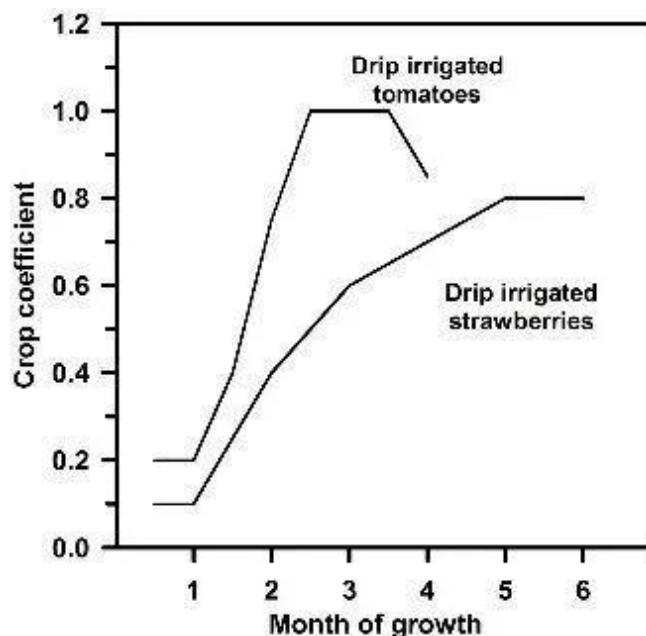


Figure 4. Crop coefficient of drip-irrigated tomato and strawberry.

Conversely, Figure 3 shows “adequate” irrigation applications for a 10-day period. In this case, the irrigation event started exclusively when the volumetric

soil water content reached a set threshold. The soil field capacity was known, so the irrigation events started when the volumetric soil moisture content reached values below field capacity ($0.09 \text{ in}^3/\text{in}^3$). However, to maintain the soil volumetric water content in the “safe irrigation zone,” a previous determination of the length of the irrigation is necessary to avoid overirrigation. Additional information about irrigation depths can be obtained in “Microirrigation in Mulched Bed Production Systems: Irrigation Depths” (<https://ask.ifas.ufl.edu/ae049>).

The example in Figure 3 received irrigation of 943 gal/A (equivalent to 0.03 in. for overhead or seepage irrigation, or 6 gal/100 ft for drip irrigation with 6 ft bed centers in plasticulture). This irrigation depth was sufficient to increase the volumetric water content to a given moisture without exceeding the “safe irrigation zone.” On average, the volumetric soil water content was maintained close to the field capacity, keeping water and nutrients in the root zone. For this example, there was no deep water percolation. In addition, with the information of the soil water status, the irrigation manager might decide not to irrigate if the soil moisture content is at a satisfactory level. For example, on day 8, due to a rainfall event of 0.04 in., there was no need for irrigation because the soil moisture was above the field capacity, and therefore, the irrigation event of day 8 was skipped. This “precise” irrigation management still requires very close attention by the irrigation manager. For a given reason (such as pump issue), the irrigation was ceased on day 5 and resumed late in day 6. As a result, soil water storage decreased below the safe irrigation zone, and if the water shortage was prolonged, the plants could become water-stressed.

Installation and Placement of Soil Moisture Sensor Devices

The use of soil moisture monitoring devices (volumetric or soil water tension) has potential to save irrigation water in a given vegetable area by reducing the number of unnecessary irrigation events. However, the effectiveness of these sensors depends on proper installation in representative locations within vegetable fields. These sensors may be used to monitor water table levels in seepage irrigation.

Sensors should be installed in the root zone of the plants to be irrigated. Most of the vegetable crops have 80% to 90% of the root zone in the upper 12 in., which generally

is the soil layer with higher water depletion by evapotranspiration. For vegetable crops cultivated in rows and irrigated by drip tapes, the sensors should be installed 2–3 in. away from the plant row. For single-row crops (such as tomato, eggplant, or watermelon), the sensor should be placed on the opposite side from the drip tape; for double-row crops (pepper, squash), the sensors should be placed in between the drip tape and plant rows.

Sensors need to be in good contact with the soil after installation; there should be no air gaps surrounding the sensor. Soil should be packed firmly but not excessively around the sensor. Alternatively, sensors can be installed in a slurry of wetted soil that was removed for the sensor installation. Using a slurry, the consistency of cake batter, can also provide the user with an initial calibration of the sensor for the determination of field capacity seen in Figure 1. In plasticulture, after the installation, the area above the sensor should be re-covered with plastic and sealed with tape.

Soil Moisture Sensor Data Interpretation

Soil moisture sensors can provide information on the depth of an irrigation or rainfall event, at what depth and in what quantity crop roots are extracting water from the soil, when irrigation is necessary, and more. However, this information is not always intuitive without some guidance. For a closer look at various soil moisture sensors and their data interpretation, visit the UF/IFAS North Florida Research and Education Center—Suwannee Valley YouTube channel and view the soil moisture sensors playlist

(<https://www.youtube.com/playlist?list=PLnumAc9HXgDyMWN-dstplSR9QWUiU9H8>).

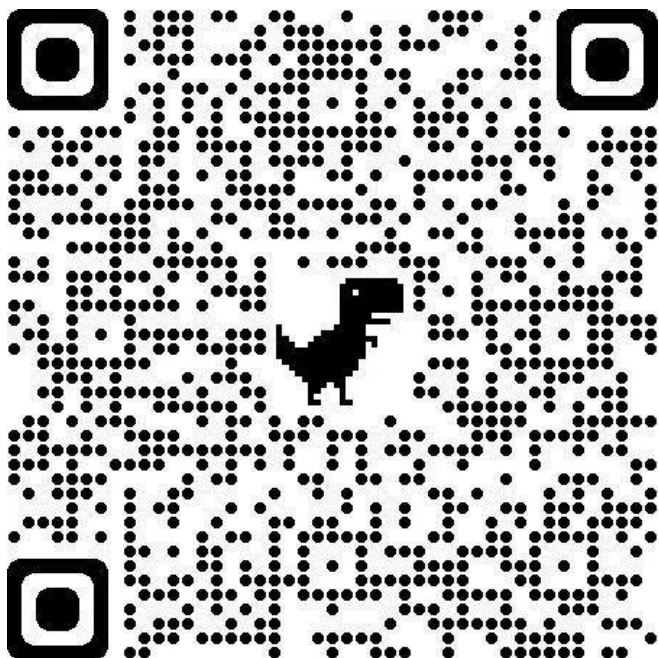


Figure 5. QR code for soil moisture sensor playlist on UF/IFAS North Florida Research and Education Center—Suwannee Valley YouTube channel.

Crop Water Requirement (ET)

Crop water requirements depend on crop type, growth stage, and evaporative demand. Evaporative demand is termed evapotranspiration (ET) and may be estimated using historical or current weather data. Generally, reference evapotranspiration (ET_o) is determined for use as a base level. By definition, ET_o represents the water use from a uniform green cover surface that is actively growing and well-watered (such as turf or a grass-covered area).

Historical daily averages of Penman-method ET_o values, expressed in units of acre-inches and gallons per acre, are available for six Florida regions (Table 4). While these values are provided as guidelines for management purposes, actual values may vary above and below these values, requiring individual site adjustments. Actual daily values may be as much as 25% higher on days that are hotter and drier than normal or as much as 25% lower on days that are cooler or more overcast than normal. Real time ET_o estimates can be found at the Florida Automated Weather Network (FAWN) internet site (<https://fawn.ifas.ufl.edu>). For precise management, SWT or soil moisture should be monitored daily in the field.

Crop water use (ET_c) is related to ET_o by a crop coefficient (K_c), which is the ratio of ET_c to the reference value ET_o (Eq. [2]). Because different methods

exist for estimating ET_o, it is very important to use K_c coefficients that were derived using the same ET_o estimation method as will be used to determine the crop water requirements. Also, K_c values for the appropriate growth stage (Tables 5 and 6; Figure 3) and production system (Tables 7 and 8) must be used.

With drip irrigation, where the wetted area is limited and plastic mulch is often used, K_c values are lower to reflect changes in row spacing and mulch use. Plastic mulches substantially reduce evaporation of water from the soil surface. Associated with the reduction of evaporation is a general increase in transpiration. Even though the transpiration rates under mulch may increase by an average of 10%–30% over the season as compared to no-mulch systems, overall water-use values decrease by an average of 10%–30% due to the reduction in soil evaporation. ET_o may be estimated from atmometers (also called modified Bellani plates) by using an adjustment factor. ET_o may be estimated from evaporation from an ET gauge (E_a) during days without rainfall as $ET_o = E_a / 0.89$ and on rainy days (>0.2 in.) as $ET_o = E_a / 0.84$.

Eq. [2] Crop water requirement = Crop coefficient × Reference evapotranspiration

$$ET_c = K_c \times ET_o$$

Soil Water-Holding Capacity and the Need to Split Irrigations

Appropriate irrigation scheduling and matching irrigation amounts with the water-holding capacity of the effective root zone may help minimize the incidence of excess leaching associated with overirrigation. In Florida sandy soils, the amount of water potentially available to the plants that can be stored in the root zone is limited. Usually, it is assumed that approximately 0.75 in. of water can be stored in every foot of the root zone. Only half of that should be used before the next irrigation to avoid plant stress and yield reduction. (This will help maintain SWT below 15 cbar.) Any additional water will be lost by deep percolation below the root zone.

Table 8 gives the approximate amount of water that can be applied at each event in Florida sandy soil under different production systems. When the calculated volume of water to be applied in one day exceeds the

values in Table 7, then it is necessary to split applications. The number of split irrigations can be determined by dividing the irrigation requirement (Eq. [1]) by the numbers in Table 8 and rounding up the result to the nearest whole number. Splitting irrigation reduces risks of water loss through deep percolation and nutrient leaching. Sandy soil with the available water-holding capacity of 0.75 in./ft was assumed in these calculations. If a soil contains more clay or organic matter, the amount of water applied during one irrigation event and stored in the root zone can be increased. To ensure that the water is not lost from the roots, it is recommended to check the depth of wetting after irrigation by digging out a perpendicular profile to the drip line and observing the wetted pattern.

Example

As an example, consider drip-irrigated tomatoes on 6 ft center beds, grown under a plastic mulch production system in the central west area (sandy soils). For plants in growth stage 5, the crop coefficient is 0.85 (Table 7). If this period of growth had occurred in May, the corresponding ETo value would be 4,887 gal/A per day (Table 4). Daily crop water use would be estimated as

$$\text{ET}_{\text{crop}} = (0.85) \times (4,887 \text{ gal/A/day}) = 4,153 \text{ gal/A/day}$$

If the drip irrigation system can apply water to the root zone of the crop with an application efficiency of 80%, the irrigation requirement would be

$$\text{Irrigation Requirement} = (4,153 \text{ gal/A/day}) / (0.80) = 5,192 \text{ gal/A/day}$$

If the maximum water application in one irrigation event for this type of soil is 1,700 gal/A per irrigation, then the irrigation will have to be split:

$$\text{Number of events} = (5,292 \text{ gal/A/day}) / (1,700 \text{ gal/A/day/irrigation event}) = 3.1, \text{ rounded up to } 4 \text{ irrigation events each of } 5,292/4 = 1,323 \text{ gal/A}$$

Therefore, in this example, four irrigations of 1,323 gal/A each would be needed to replace ETc without exceeding the soil water-holding capacity. This amount of water would be a good estimate for scheduling purposes under average growth and average May climatic conditions. However, field moisture plant status should also be monitored to determine if irrigation levels need to be increased or reduced. While deficit irrigation will reduce fruit size and plant growth, excessive irrigation may leach nutrients from the active root system. This may also reduce plant growth and yield.

Table 1. Application efficiency for water delivery systems used in Florida.

Irrigation System	Application Efficiency (Ea)
Overhead	60%–80%
Seepage ¹	20%–70%
Drip ²	80%–95%
¹ Ea greater than 50% is not expected unless tailwater recovery is used.	
² With or without plastic mulch.	

Table 2. Levels of water management and corresponding irrigation scheduling method.

Water Mgt. Level	Irrigation Scheduling Method
0	Guessing (irrigate whenever); not recommended
1	Using the “feel-and-see” method
2	Using systematic irrigation (Example: 0.75 in. every 4th day, or 2 hr every day)
3	Using a soil water tension measuring tool or soil moisture sensor to start irrigation
4	Scheduling irrigation, applying amounts based on a budgeting procedure, and checking actual soil water status
5 ^a	Adjusting irrigation to plant water use (ET _o), and using a dynamic water balance based on a budgeting procedure and plant stage of growth, together while using a soil water tension measuring tool or soil moisture sensor
^a Recommended method	

Table 3. Summary of irrigation scheduling guidelines for vegetable crops grown in Florida.

Irrigation Scheduling Component	Irrigation System¹	
	Seepage²	Drip³
1—Target water application rate	Keep water table between 18 and 24 in. depth.	Historical weather data or crop evapotranspiration (ET _c) calculated from reference ET or Class A pan evaporation
2—Fine-tune application with soil moisture measurement	Monitor water table depth with observation wells.	Maintain soil moisture level in the root zone between 8 and 15 cbar (or 8% and 12% available soil moisture)
3—Determine the contribution of rainfall	Typically, 1 in. of rainfall raises the water table by 1 ft.	Poor lateral water movement on sandy and rocky soils limits the contribution of rainfall to crop water needs to (1) foliar absorption and cooling of foliage and (2) water funneled by the canopy through the plan hole.
4—Rule for splitting irrigation	Not applicable. However, a water budget can be developed.	Irrigations greater than 12 and 50 gal/100 ft (or 30 min and 2 hr for drip tapes with medium flow-rate) when plants are small and fully grown, respectively, will likely push the waterfront below the root zone
5—Recordkeeping	Irrigation amount applied and total rainfall received ⁴ Days of system operation	Irrigation amount applied and total rainfall received ⁴ Daily irrigation schedule
¹ Efficient irrigation scheduling also requires a properly designed and maintained irrigation system.		
² Practical only when a spodic layer is present in the field.		
³ On deep sandy soils.		
⁴ Required by the BMPs.		

Table 4. Historical Penman method reference evapotranspiration (ET_o) for six Florida regions expressed in (A) inches per day and (B) gallons per acre per day.¹

	Month	Northwest	Northeast	Central	Central West	Southwest	Southeast
Inches per day (A)	Jan	0.06	0.07	0.07	0.07	0.08	0.08
	Feb	0.07	0.08	0.10	0.10	0.11	0.11
	Mar	0.10	0.10	0.12	0.13	0.13	0.13
	Apr	0.13	0.14	0.16	0.16	0.17	0.17
	May	0.16	0.16	0.18	0.18	0.18	0.18
	Jun	0.17	0.16	0.18	0.18	0.18	0.17
	Jul	0.17	0.16	0.17	0.17	0.18	0.18
	Aug	0.15	0.15	0.17	0.16	0.17	0.16
	Sep	0.13	0.13	0.14	0.14	0.15	0.14
	Oct	0.09	0.10	0.11	0.11	0.12	0.12
	Nov	0.07	0.07	0.08	0.08	0.09	0.09
	Dec	0.05	0.06	0.06	0.07	0.07	0.07
Gallons per acre per day² (B)	Jan	1,629	1,901	1,901	1,901	2,172	2,172
	Feb	1,901	2,172	2,715	2,715	2,987	2,987
	Mar	2,715	2,715	3,258	3,530	3,530	3,530
	Apr	3,530	3,801	4,344	4,344	4,616	4,616
	May	4,344	4,344	4,887	4,887	4,887	4,887
	Jun	4,616	4,344	4,887	4,887	4,887	4,616
	Jul	4,616	4,344	4,616	4,616	4,887	4,887
	Aug	4,073	4,073	4,616	4,344	4,616	4,344
	Sept	3,530	3,530	3,801	3,801	4,073	3,801
	Oct	2,444	2,715	2,987	2,987	3,258	3,258
	Nov	1,901	1,901	2,172	2,172	2,444	2,444
	Dec	1,358	1,629	1,629	1,629	1,901	1,901

¹ Assuming water application over the entire area, i.e., sprinkler or seepage irrigation with 100% efficiency. See Table 1 for the conversion used to account for irrigation system efficiency.

² Calculation: For overhead or seepage irrigation, (B) = (A) × 27,150. To convert values for drip irrigation (C), use (C) = (B) × bed spacing/435.6. For example, for 6 ft bed spacing and a single drip line, (C) in southwest Florida in January is (C) = 2,172 × 6/435.6 = 30 gal/100 ft/day.

Table 5. Description of growth stages (plant appearance and estimated number of weeks) for most vegetable crops grown in the spring in Florida.¹

Crop	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Expected Growing Season (Weeks)
Bean	Small plants 2–3	Growing plants 3–4	Pod enlargement 2–3	Pod maturation 2–3	–	9–10
Cabbage, cauliflower, Chinese cabbage	Small plants 2–3	Growing plants 5–6	Head development 3–4	–	–	10–12
Cantaloupe (muskmelon)	6 in. vine 1–2	12 in. vine 3–4	First flower 3–4	Main fruit production 2–3	Late fruit production 2–3	11–12
Carrot	Small plants 1–2	Growing plants 3–4	Root development 5–7	Final growth 1–2	–	10–13

Crop	Stage 1	Stage 2	Stage 3	Stage 4	Stage 5	Expected Growing Season (Weeks)
Cucumber	6 in. vine 1-2	12 in. vine 2-3	Fruit production 6-7	Late season 1-2	-	10-12
Eggplant	Small plants 2-3	Growing plants 2-3	Fruit production 6-7	Late season 2-3	-	12-13
Potato	Small plants (after hilling) 2-4	Large plants (vegetative growth) 4-6	First flower (tube initiation and bulking) 3-5	Maturation (top dies) 2-4	-	12-14
Okra	Small plants 2-3	Growing plants 2-3	Pod production 7-8	Late season 1-2	-	12-13
Onion	Small plants 2-4	Growing plants 4-5	Bulb development 6-8	Maturation (top falls) 1-2	-	13-16
Pepper	Small plants 2-3	Growing plants 2-3	Pod production 7-8	Last bloom 1-2	Last harvest 1	13-15
Potato	Small plants (after hilling) 2-4	Large plants (vegetative growth) 4-6	First flower (tube initiation and bulking) 3-5	Maturation (top dies) 2-4	-	12-14
Pumpkin (bush)	Small plants 2-3	First flower 2-3	Fruit enlargement 5-6	Harvest 1-2	-	9-11
Pumpkin (vining)	6 in. vines 2-3	12 in. vines 2-3	Small fruit 3-4	Large fruit 2-3	Harvest 1-2	13-15
Radish	Small plants 1-2	Rapid growth 2-4	-	-	-	3-5
Strawberry	Young plants October	Growing plants November	Early harvest December- January	Main harvest period February- March	Late harvest April	23-30
Summer squash (crookneck, straightneck, zucchini)	Small plants 1-2	Growing plants 2-3	Fruit production 3-4	Late fruit production 1	-	7-9
Sweet corn	Small plants 3-4	Large plants 5-8	Ear development 2-3	-	-	10-15
Sweetpotato	Early vine growth 2-3	Expanding vines 5-6	Storage root enlargement 6-10	-	Late season	13-17
Tomato	Small plants 2-3	1st bloom 2-3	2nd, 3rd bloom 6-7	Harvest 1-2	Late harvest 1-2	12-14
Watermelon	6 in. vines 2-3	12 in. vines 2-3	Small fruit 3-4	Large fruit 2-3	Harvest 1-2	13-15
¹ Same growth stages used for irrigation and fertilizer schedules; for south Florida, each stage may be 30% longer because of winter planting during short days.						

Table 6. Crop coefficient estimates for use with the ETo values in Table 4 and growth stages in Table 5 for unmulched crops. (Actual values will vary with time of planting, soil conditions, cultural conditions, length of growing season, and other site-specific factors.)

Crop	Growth Stage	Crop Coefficient ¹
All field-grown vegetables	1	0.20 ² –0.40 ³
	2	Stage 1 ⁴ value to Stage 3 value (see Figure 4)
Beet	3	1.00
	4	0.90
Carrot	3	1.00
	4	0.70
Celery	3	1.00
	4	0.90
Cole crops: broccoli, brussels sprout, cabbage, cauliflower	3	0.95
	4	0.80 ⁵
Cole crops: collards, kale, mustard, turnip	3	0.90 ⁵
	4	1.00 ⁵
Cucurbits: cucumber, cantaloupe, pumpkin, squash, watermelon	3	0.90
	4	0.70
Legumes: snapbean, lima bean, and southernpea	3	0.95 ⁵
	4	0.85 ⁵
Lettuce, endive, escarole	3	0.95
	4	0.90
Okra	3	1.00 ⁵
	4	0.90 ⁵
Onion (dry)	3	0.95
	4	0.75
Onion (green)	3 and 4	0.95
Parsley	3	1.00 ⁵
Potato	3	1.10
	4	0.70
Radish	3	0.80
	4	0.75
Spinach	3	0.95
	4	0.90
Sweet corn	3	1.10
	4	1.00
Sweetpotato	3	1.10 ⁵
	4	0.70 ⁵

¹ Adapted from Doorenbos, J., and W. O. Pruitt. 1977. "Crop Water Requirements." Food and Agriculture Organization of the United Nations (FAO) Irrigation and Drainage Paper No. 24, (rev.); and Allen, R. G., L. S. Pereira, D. Raes, and M. Smith. 1998. "Crop Evapotranspiration: Guidelines for Computing Crop Water Requirements." Food and Agriculture Organization of the United Nations (FAO) Irrigation and Drainage Paper No. 56.

² low plant population; wide row spacing.

³ high plant population; close row spacing.

⁴ 0.30 or Kc value from Stage 1.

⁵ values estimated from similar crops.

Table 7. Crop coefficient estimates (Kc) for use with ETo values in Table 4 and growth stages in Table 5 for selected crops grown in a plasticulture system.¹

Crop	Growth Stage	Crop Coefficient (Kc)
Cantaloupe ¹	1	0.35
	2	0.6
	3	0.85
	4	0.85
	5	0.85
Cucumber ¹	1	0.25
	2	0.5
	3	0.9
	4	0.75
Summer squash ¹	1	0.3
	2	0.55
	3	0.9
	4	0.8
Strawberry (4 ft bed centers) ²	1	0.4
	2	0.5
	3	0.6
	4	0.8
	5	0.8
Tomato (6 ft bed centers) ³	1	0.4
	2	0.75
	3	1.0
	4	1.0
	5	0.85
Watermelon (8 ft bed center) ¹	1	0.3
	2	0.5
	3	0.7
	4	0.9
	5	0.8
¹ Adapted from Tables 12 and 25 in Allen, R. G., L. S. Pereira, D. Raes, and M. Smith. 1998. "Crop Evapotranspiration: Guidelines for Computing Crop Water Requirements." Food and Agriculture Organization of the United Nations (FAO) Irrigation and Drainage Paper No. 56. ² Adapted from Clark et al. 1993. "Water Requirements and Crop Coefficients for Tomato Production in Southwest Florida." Southwest Florida Water Management District. ³ Adapted from Clark et al. 1996. "Water Requirements and Crop Coefficients of Drip-Irrigated Strawberry Plants." <i>Transactions of the ASAE</i> 39: 905–913.		

Table 8. Maximum water application (in gal/A and in gal/100 ft) in one irrigation event for various production systems on sandy soil (available water-holding capacity 0.75 in./ft and 50% soil water depletion). Split irrigations may be required during peak water requirement.

Vegetable Crop	Bed Spacing (ft)	Bed Length (100 lb/Acre)	Wetting Width (ft)	Gallon/ 100 ft to Wet Depth of 1 ft	Gallon/ 100 ft to Wet Depth of 1.5 ft	Gallon/ 100 ft to Wet Depth of 2 ft	Gallon/ Acre to Wet Depth of 1 ft	Gallon/ Acre to Wet Depth of 1.5 ft	Gallon/ Acre to Wet Depth of 2 ft
Lettuce, strawberry	4	109	1.0	24	36	48	2,600	3,800	5,100
Muskmelon	5	87	1.0	24	36	48	2,100	3,100	4,100
Broccoli, cabbage, cauliflower, eggplant, okra, pepper, pumpkin (bush), summer squash, tomato	6	73	1.0	24	36	48	1,700	2,600	3,500
Pumpkin (vining), watermelon	8	55	1.0	24	36	48	1,300	1,900	2,600
Lettuce, strawberry	4	109	1.5	1.5	36	54	3,800	5,800	7,600
Muskmelon	5	87	1.5	1.5	36	54	3,100	4,700	6,200
Broccoli, cabbage, cauliflower, eggplant, okra, pepper, pumpkin (bush), summer squash, tomato	6	73	1.5	1.5	36	54	2,600	3,900	5,200
Pumpkin (vining), watermelon	8	55	1.5	1.5	36	54	1,900	3,000	3,900

¹ This document is CV297, one of a series of the Department of Horticultural Sciences, UF/IFAS Extension. Original publication date June 2015. Revised annually. Most recent revision August 2026. Visit the Ask IFAS website at <https://ask.ifas.ufl.edu> for the currently supported version of this publication. © 2026 UF/IFAS. This publication is licensed under [CC BY-NC-ND 4.0](#).

² Lincoln Zotarelli, professor and Extension specialist, UF/IFAS Department of Horticultural Sciences, Gainesville, FL; Michael D. Dukes, director, UF/IFAS Nutrient Management Program, associate dean for special initiatives, UF/IFAS Extension, professor, Department of Agricultural and Biological Engineering, and director, Center for Land Use Efficiency, Gainesville, FL; Eric H. Simonne, distinguished professor, vegetable production, UF/IFAS Department of Horticultural Sciences, Gainesville, FL; UF/IFAS Extension, Gainesville, FL 32611.

The Institute of Food and Agricultural Sciences (IFAS) is an Equal Opportunity Institution authorized to provide research, educational information, and other services only to individuals and institutions that operate in compliance with applicable federal and state non-discrimination laws and policies. For more information on obtaining other UF/IFAS Extension publications, contact your county's UF/IFAS Extension office. U.S. Department of Agriculture, UF/IFAS Extension Service, University of Florida, IFAS, Florida A&M University Cooperative Extension Program, and Boards of County Commissioners Cooperating. Andra Johnson, dean for UF/IFAS Extension.